

## HINDERMANN INSECT CURTAIN

HINDERMANN package includes:  
1 insect curtain with 2-way zipper,  
1 roll of Velcro with adhesive backing,  
1 pack PRYM press studs



Note: The insect screen curtain is mounted inside the vehicle. The sliding door can be closed once the mosquito curtain has been mounted. The following descriptions assume direction of view is "from outside".

Note: With 2 people, simulate fitting, make sure that you have the correct mosquito net! Before starting work!. Be aware that all motorhomes are different, therefore the need to make minor modifications are common.

Note: Adhesive velcro attaches best to flat surfaces, preferably plastic surrounds. It will not attach well to either carpeted internal boarding or fine ribbed plastic / rubber surrounds – see pics – page 2. In these circumstances either fit to the next flat surface or use press studs to support the net.



Note: If you have no kitchen unit in the doorway, this mosquito net will not fit without major alterations (Return if necessary).

- 1) Lay the curtain out flat, preferably on a large enough surface – floor / table.
- 2) Attach the self-adhesive hook tape (counterpart of loop tape) along the outer edge of the frieze / curtain perimeter, where appropriate.
- 3) Align the insect curtain fabric from the inside in the upper **left corner** body (viewed from outside). Remove the paper backing (small area / only a few cm at a time). For mounting in the upper body rounded corners offer 2 options:  
3a) Cut the fabric with scissors approximately corresponding to the radius. Because the fabric is coated in a special process, no threads will appear.  
3b) Leave the angle at 90° and simply fold over the fabric in the corners if there is an excess. Material will flatten out.
- 4) Attach it on the right side of the insect curtain fabric along the fascia (target area) all the way to the ground close to the rubber seal. During this procedure, remove the paper backing slowly, only a very small section at a time.
- 5) Remove any material / velcro where the step area is, using scissors (probably unnecessary).
- 6) Press down on the **top edge** of the insect curtain fabric firmly along the target area. (as previously, only a small section at a time) You'll notice that there is an additional reverse strip of velcro on the top edge of the curtain, this is for fitting against any cupboards mounted above the door way (again only if necessary).
- 7) Attach it to the **right side** - along the edge following the rubber seal downwards (possibly only up to the kitchen block).
- 8) If a kitchen block is present, if required cut the curtain along the top edge (only the width of the Velcro) This enables press stud fixing on outer edge.
- 9) The curtain now hangs in front of the kitchen block. The excess material along the door edge profile can be highlighted / marked out on the material and removed, if necessary – **remember make sure the alignment is checked before doing this procedure.**
- 10) With the accompanying PRYM press studs – attach as directed on packaging, both on kitchen block and curtain material.

***\*Before you cut the material away - always double check on alignment as material cannot be re-attached!! – see images on our dedicated web site page which may provide further assistance.***

***\*If you have carpeted interior walls, it may be better to mount the product partially or entirely via press studs. If you don't have enough press studs call us, we sell additional packs.***

## HINDERMANN INSECT CURTAIN

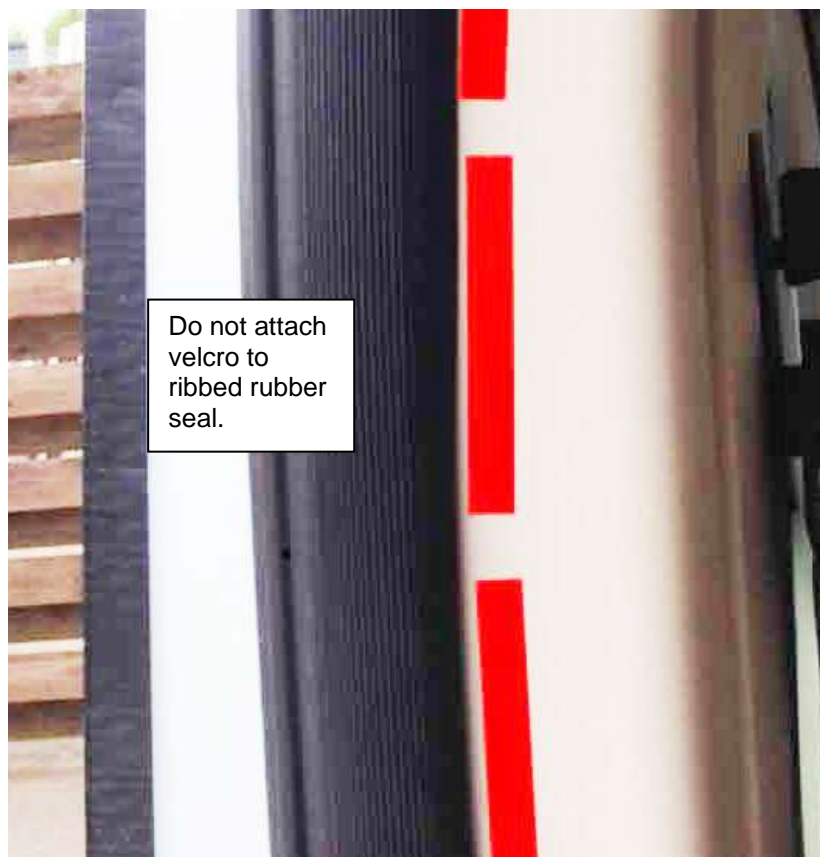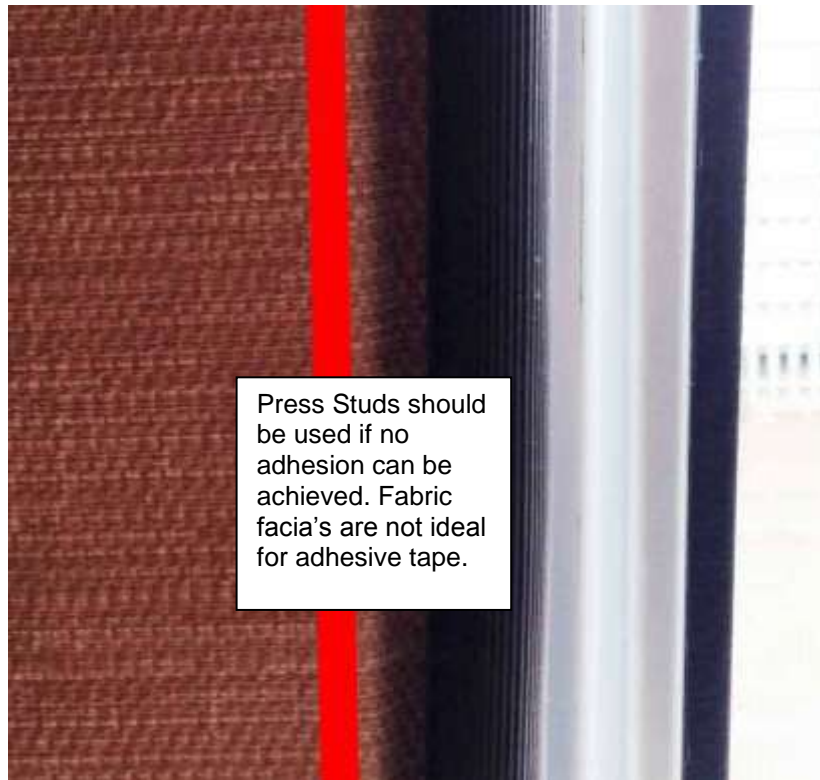

# HINDERMANN INSEKTENSCHUTZGEWEBE



01



02



05



03



07



08

06



09



09



10



10



11

